 


# *LifeFitness*

Arctic Silver 90R Recumbent Bike

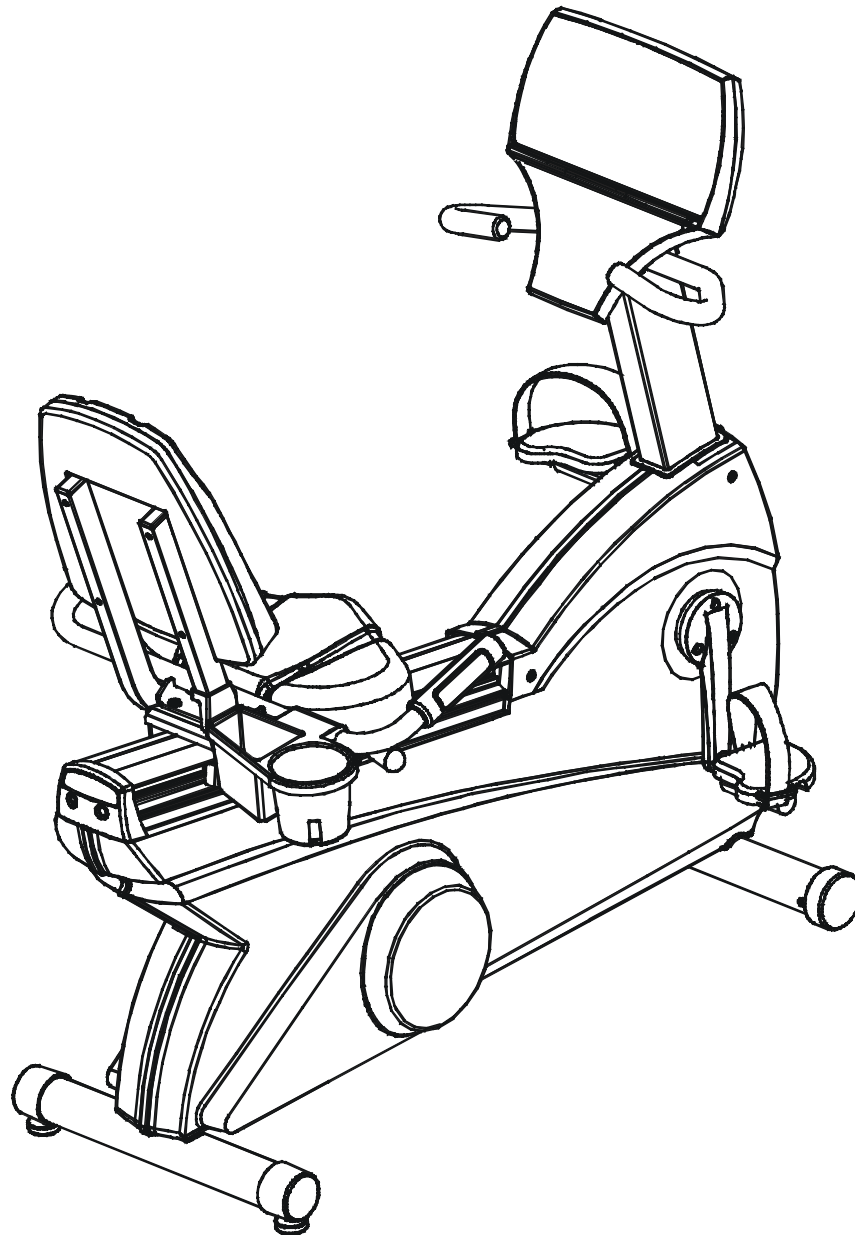

Customer Support Services  
**PARTS MANUAL** revised 29 Apr 2008

**ARCTIC SILVER 90R**  
**REFERENCES**

**90R-0XXX-02**  
**S/N CCJ100000 and UP**

---

OPERATION MANUAL	M051-00K39-A020
ACCESSORY TRAY KIT	AK39-00052-0004
HARDWARE BAG	GK39-00002-0008
POLAR UPGRADE KIT	GK39-00002-0001
TOUCH UP PAINT: SPRAY CAN .5 OZ BOTTLE W/APPLICATOR .33 OZ PEN	0017-00008-0204 0017-00008-0205 0017-00008-0206
SERVICE MANUAL	M051-00K39-A012

**ARCTIC SILVER 90R**  
**CONTENTS**

**90R-0XXX-02**  
**S/N CCJ100000 and UP**

---

 
	Page
CONSOLE COMPONENTS .....	4
CONSOLE SUPPORT ASSEMBLY .....	5
SHROUDS, END CAP, CRANKARMS AND PEDALS .....	6
BELTS.....	7
POWER CONTROL BOARD .....	8
ALTERNATOR W/PULLEY .....	9
CRANKSHAFT AND BEARING ASSEMBLY.....	10
INTERMEDIATE SHAFT AND BEARING ASSEMBLY .....	11
IDLER BRACKET ASSEMBLY.....	12
SEAT ASSEMBLY.....	13
SEAT BOTTOM ASSEMBLY.....	14
SEAT FRAME ASSEMBLY.....	15
SEAT PADS AND ACCESSORY TRAY.....	16
EXTRUSION ASSEMBLY.....	17
SEAT LOCKING ASSEMBLY.....	18
WHEEL AND LEVELER.....	19
CABLES.....	20

# ARCTIC SILVER 90R

## Console Components

90R-0XXX-02


S/N CCJ100000 and UP

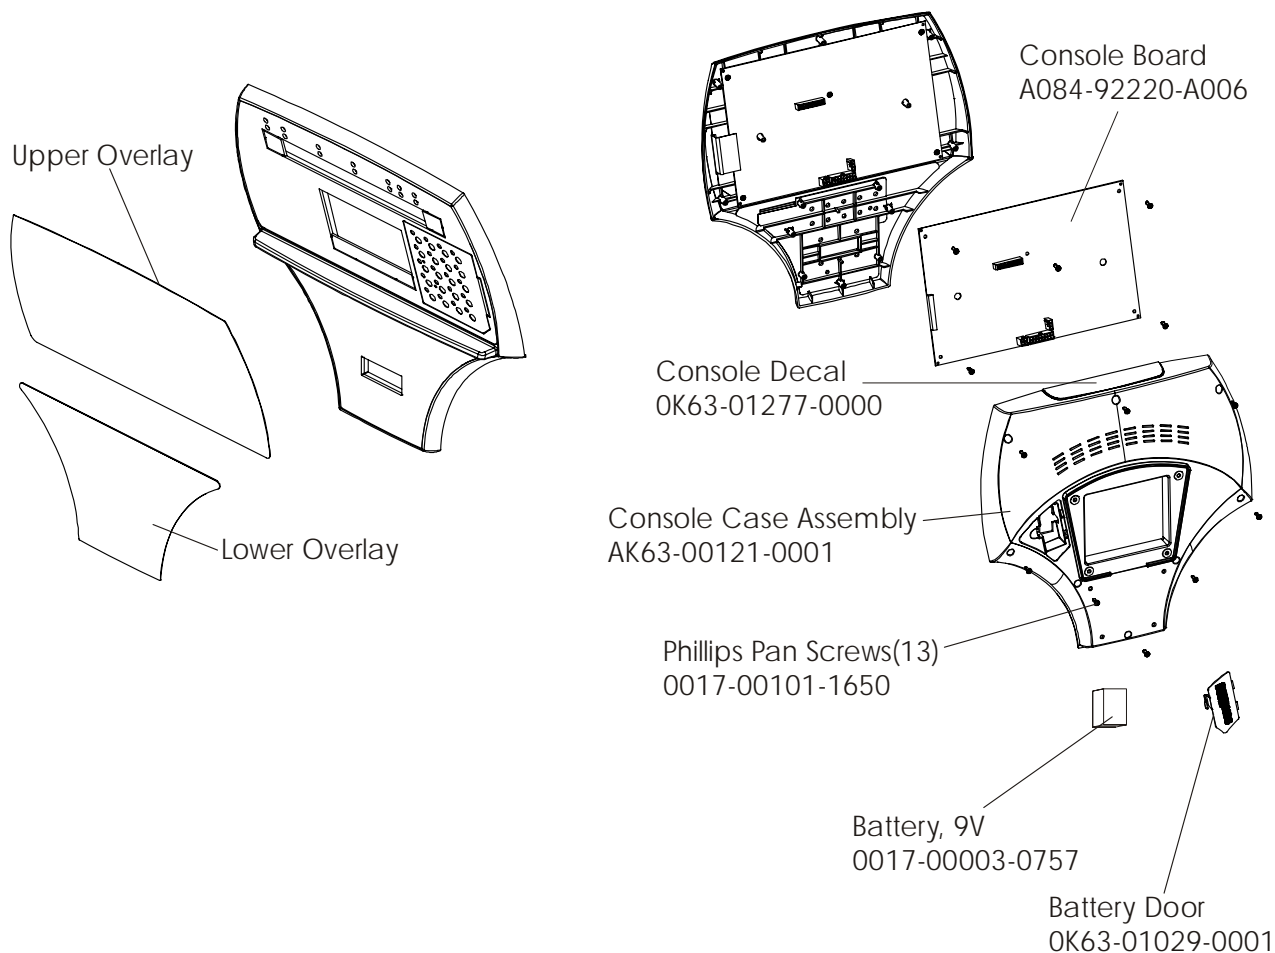

Console Assembly	Overlay/Bezel/Switch Assy.
AK63-00162-0001 Eng Met	AK63-00167-0001 Eng Met
AK39-00072-0003 Ger Met	AK63-00167-0003 Ger Met
AK39-00072-0004 Spn Met	AK63-00167-0004 Spn Met
AK39-00072-0006 Jap Met	AK63-00167-0006 Jap Met
AK39-00072-0007 Frn Met	AK63-00167-0007 Frn Met
AK39-00072-0008 Itl Met	AK63-00167-0008 Itl Met
AK39-00072-0009 Dut Met	AK63-00167-0009 Dut Met
AK39-00072-0010 Por Met	AK63-00167-0010 Por Met

**ARCTIC SILVER 90R**  
**Console Support Assembly**

 **90R-0XXX-02**  
**S/N CCJ100000 and UP**

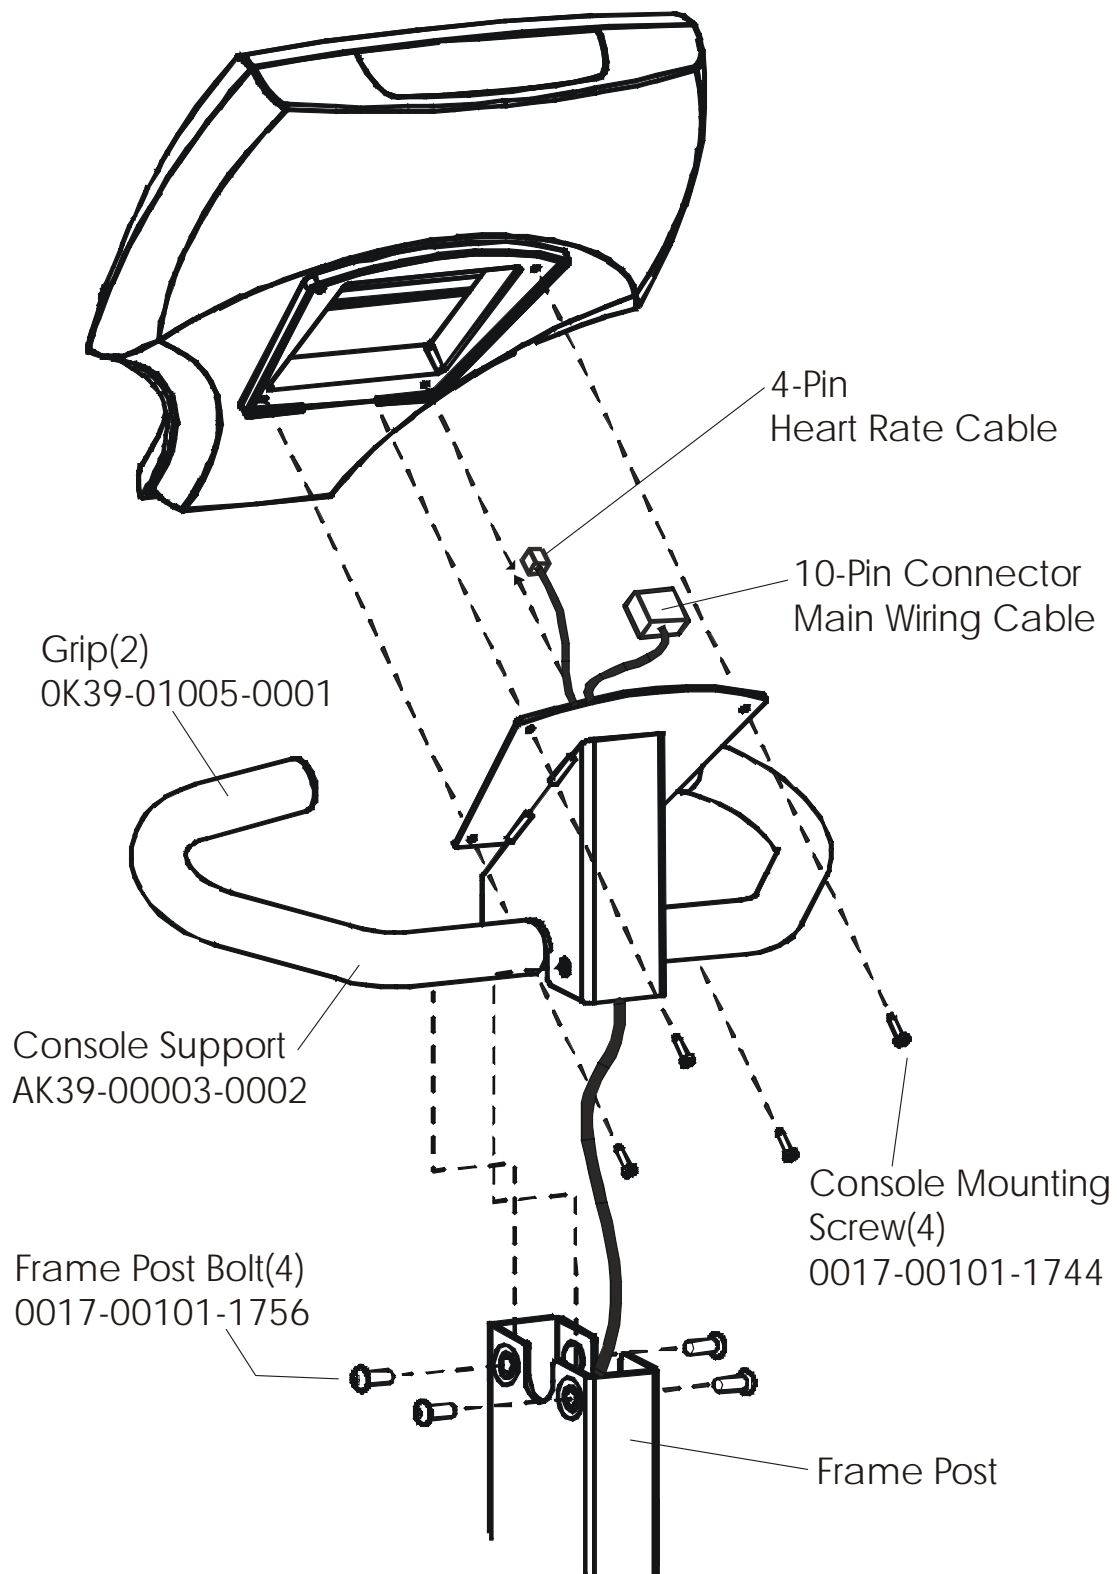


## ARCTIC SILVER 90R

### Shrouds, End Cap and Pedals

90R-0XXX-02

 S/N CCJ100000 and UP

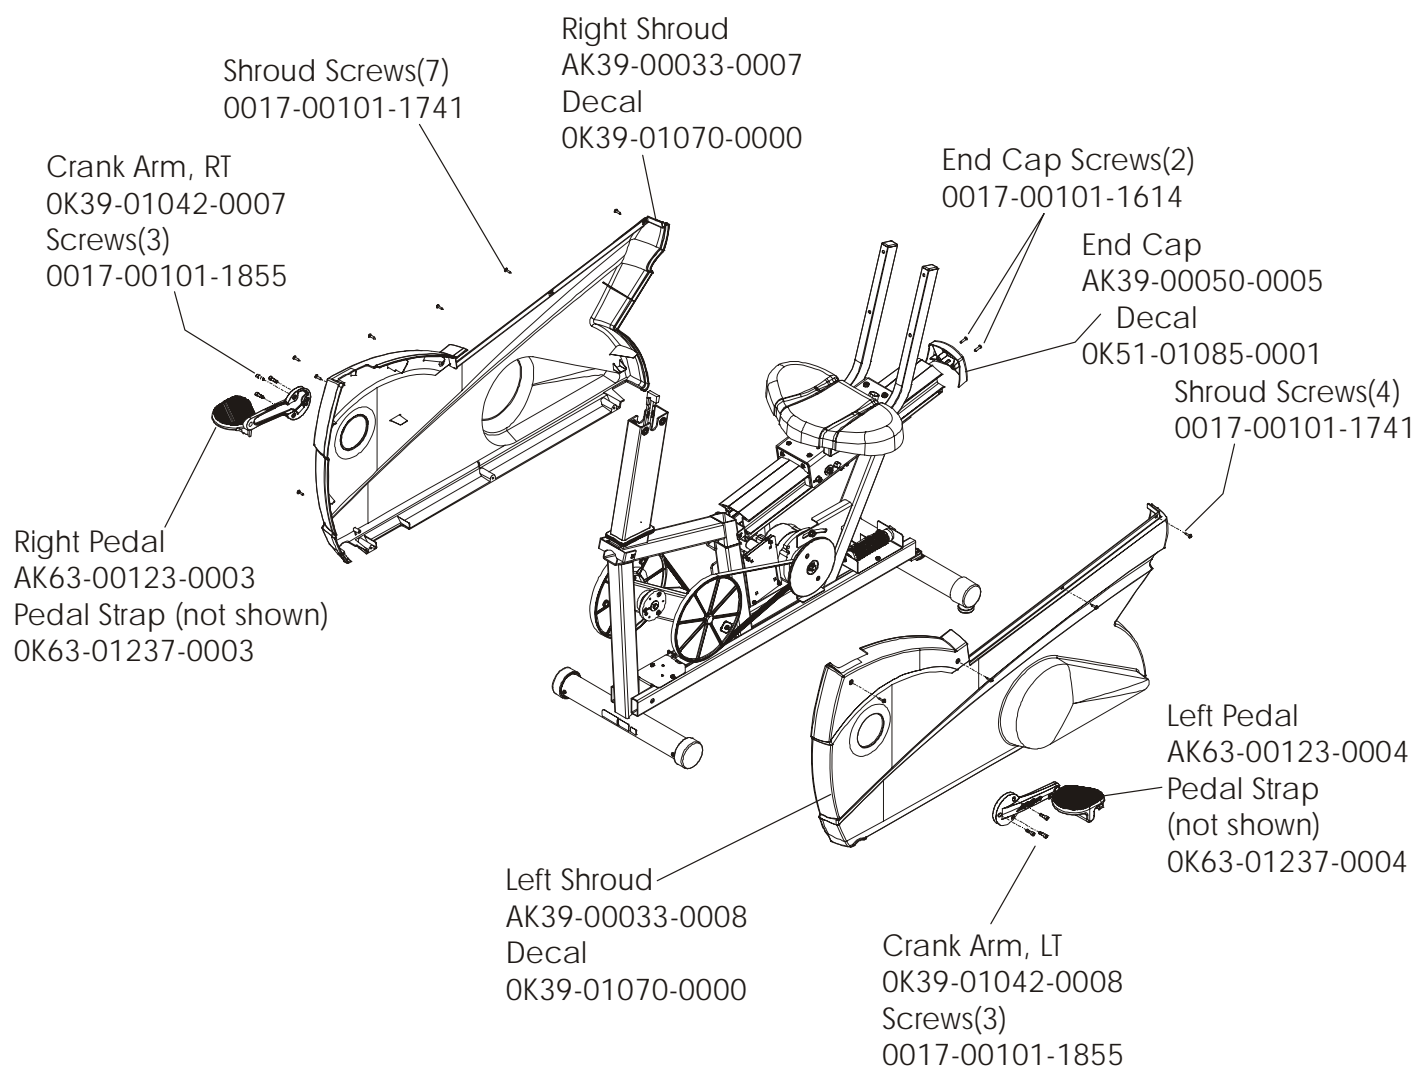


# ARCTIC SILVER 90R

## Belts

90R-0XXX-02

 S/N CCJ100000 and UP

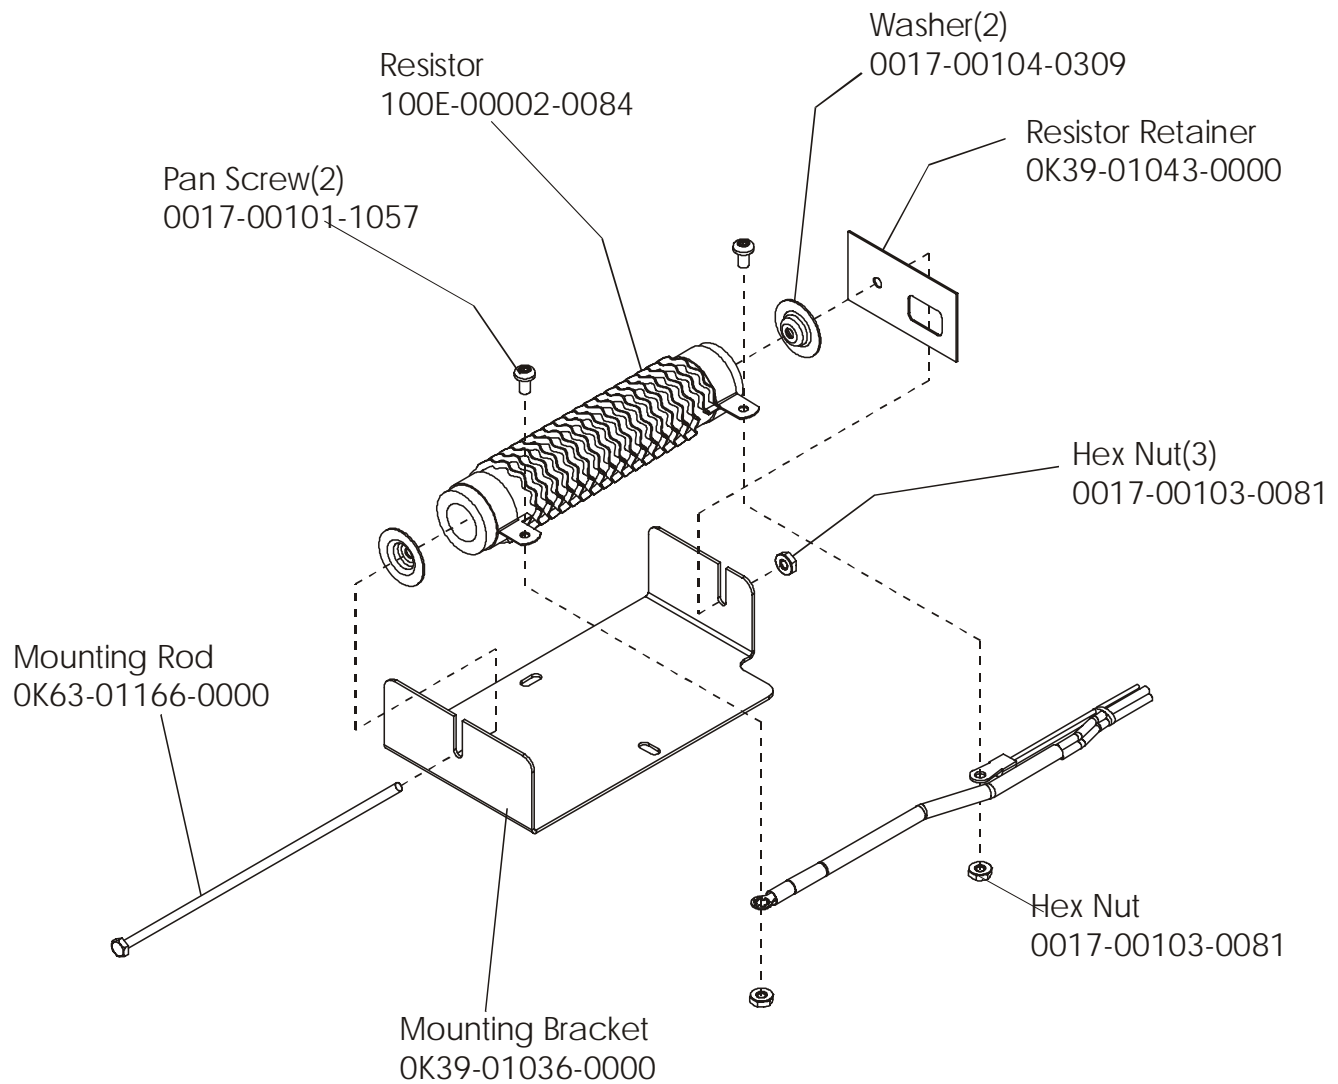


## ARCTIC SILVER 90R

### Power Control Board

90R-0XXX-02

S/N CCJ100000 and UP

 Assembly Number - AK39-00022-0002

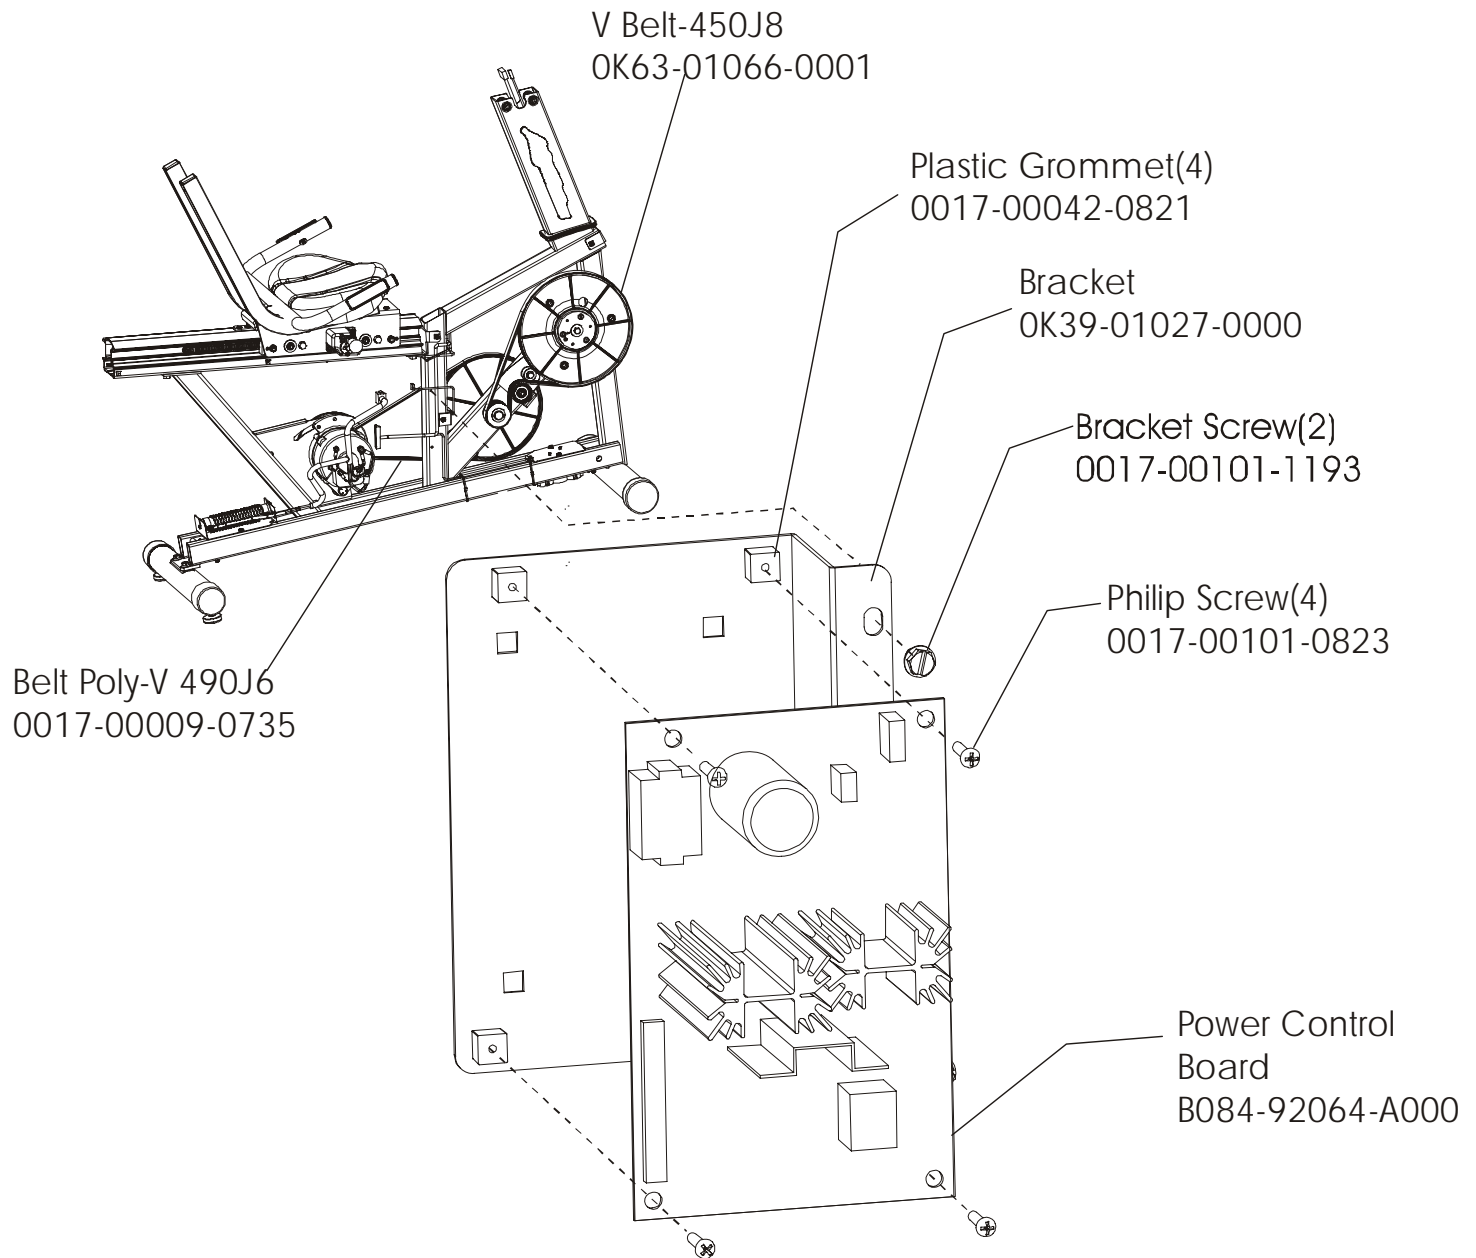



**ARCTIC SILVER 90R**  
**Alternator w/Pulley Assembly**

**90R-0XXX-02**  
**S/N CCJ100000 and UP**

Assembly Number – AK63-00093-0000

 
Alternator Pulley  
OK61-02500-0001

Alternator  
0017-00009-0841

Locking Nut  
0017-00103-0117


Washer  
0017-00104-0044

Bolt  
0017-00101-0956

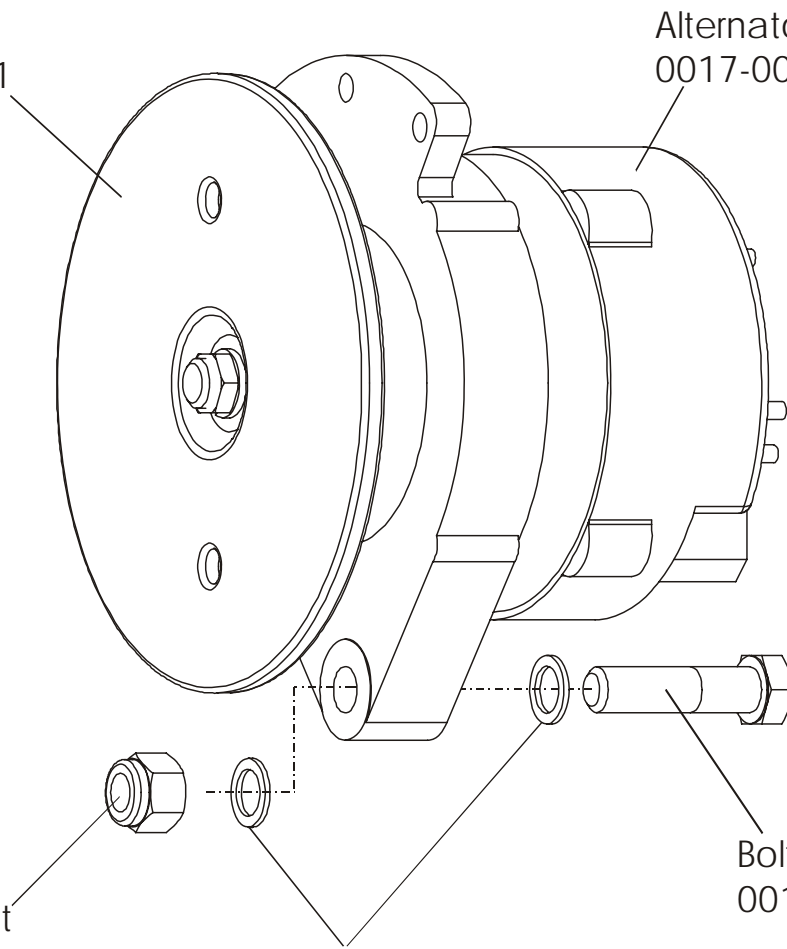

**ARCTIC SILVER 90R**  
**Crank Shaft and Bearing Assembly**

 **90R-0XXX-02**  
**S/N CCJ100000 and UP**

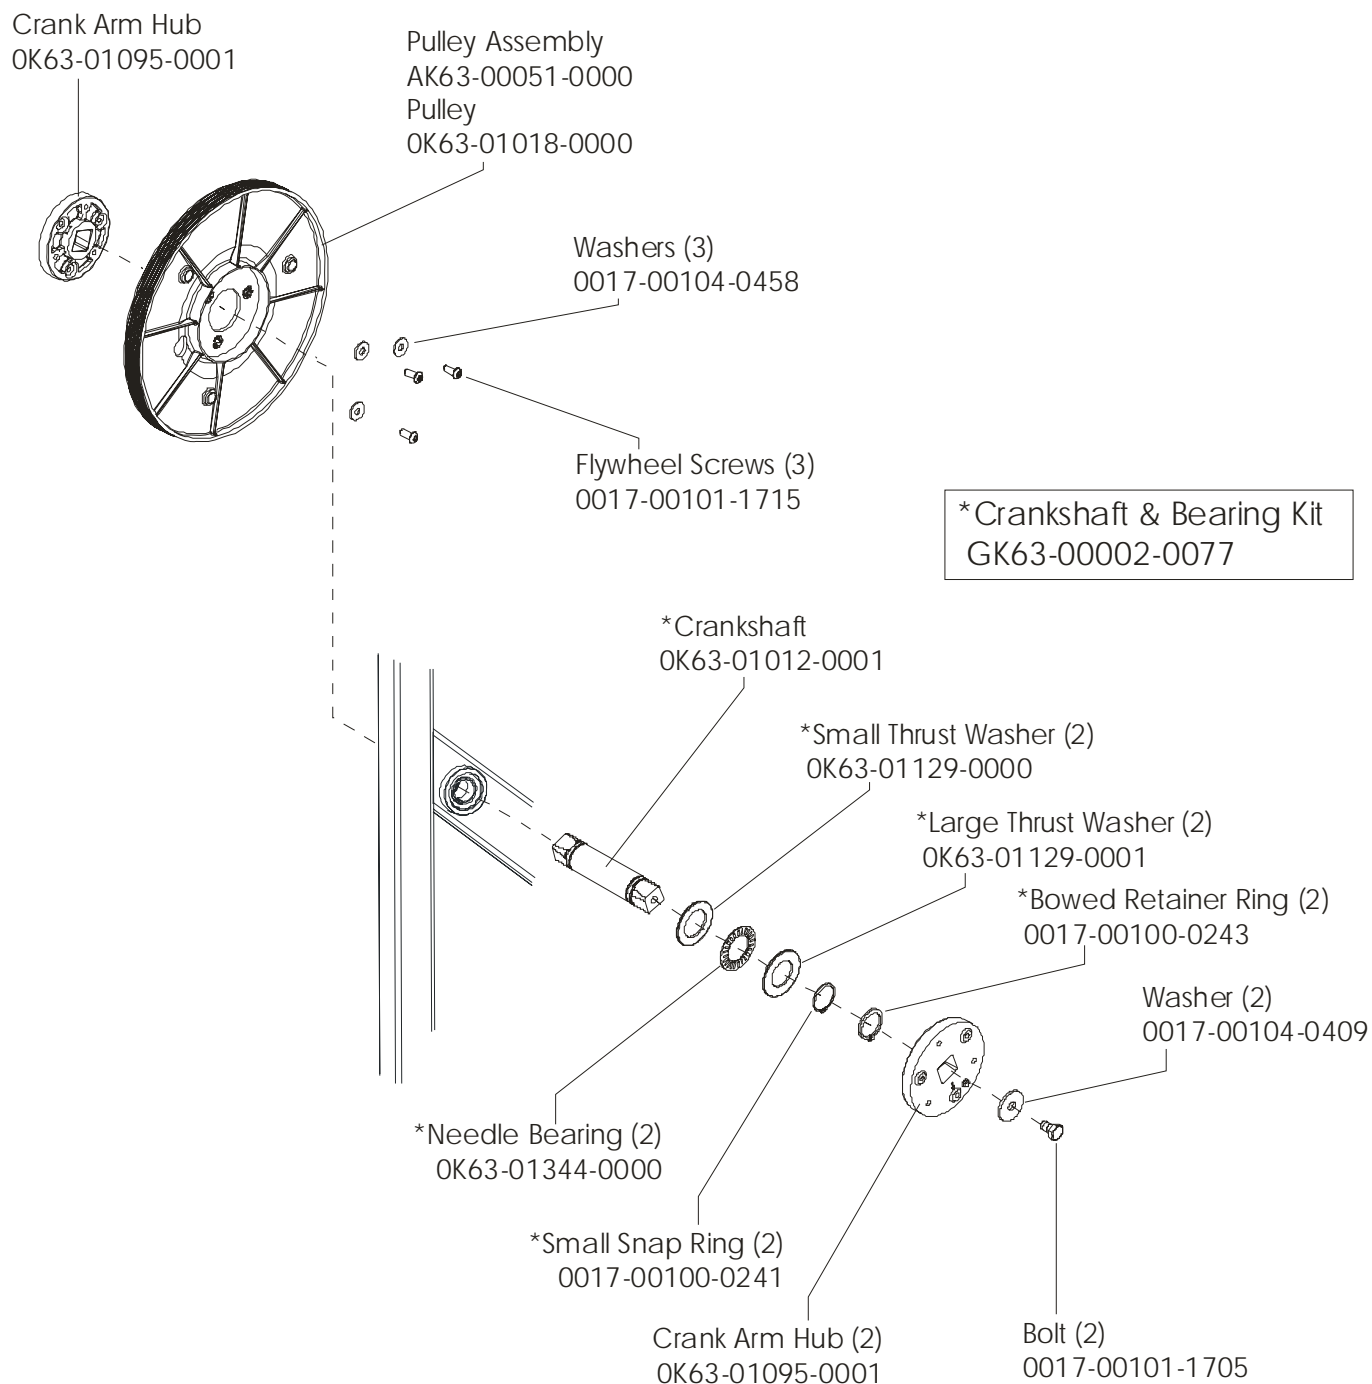


## ARCTIC SILVER 90R

### Intermediate Shaft and Bearing Assembly

90R-0XXX-02

 
S/N CCJ100000 and UP

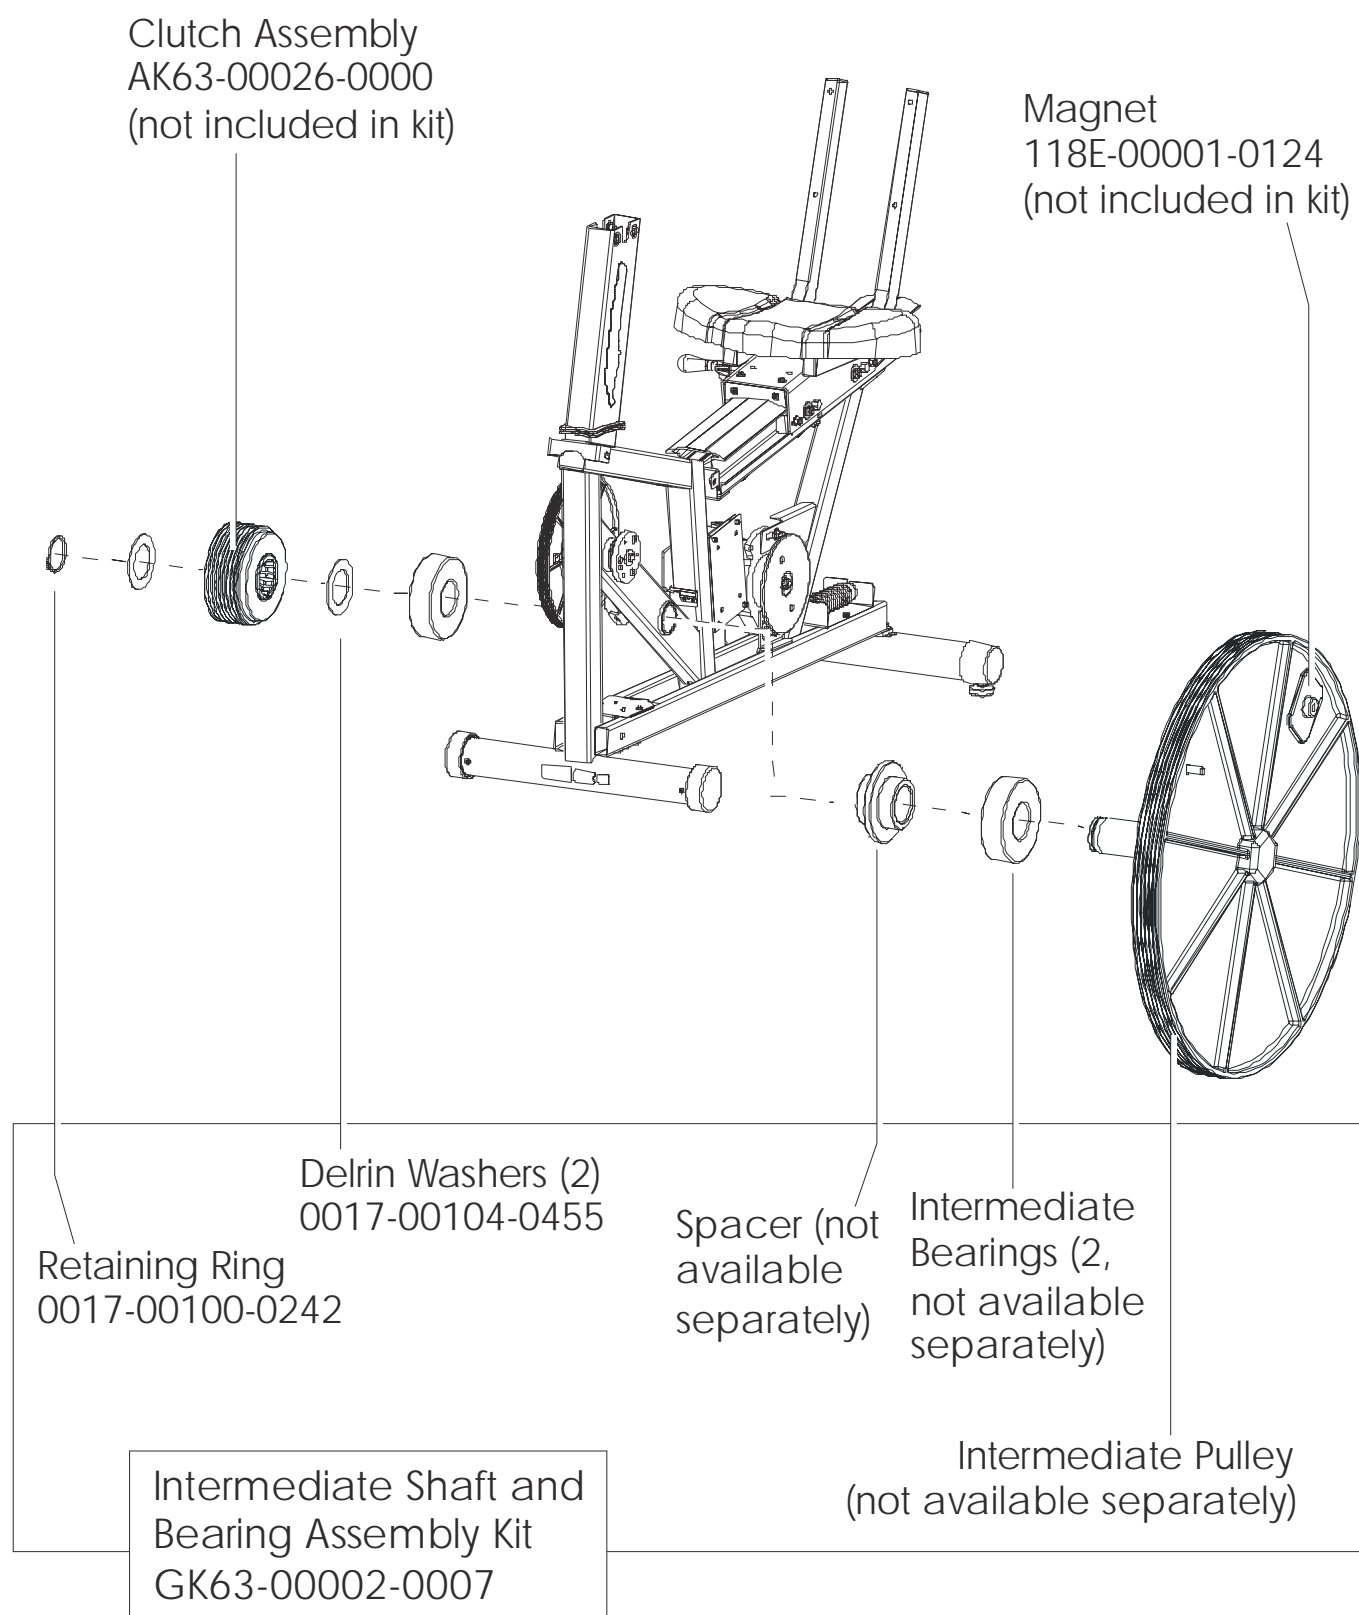

**ARCTIC SILVER 90R**  
**Idler Bracket Assembly**


**90R-0XXX-02**  
**S/N CCJ100000 and UP**

 Idler Bracket Assembly – AK63-00021-0000

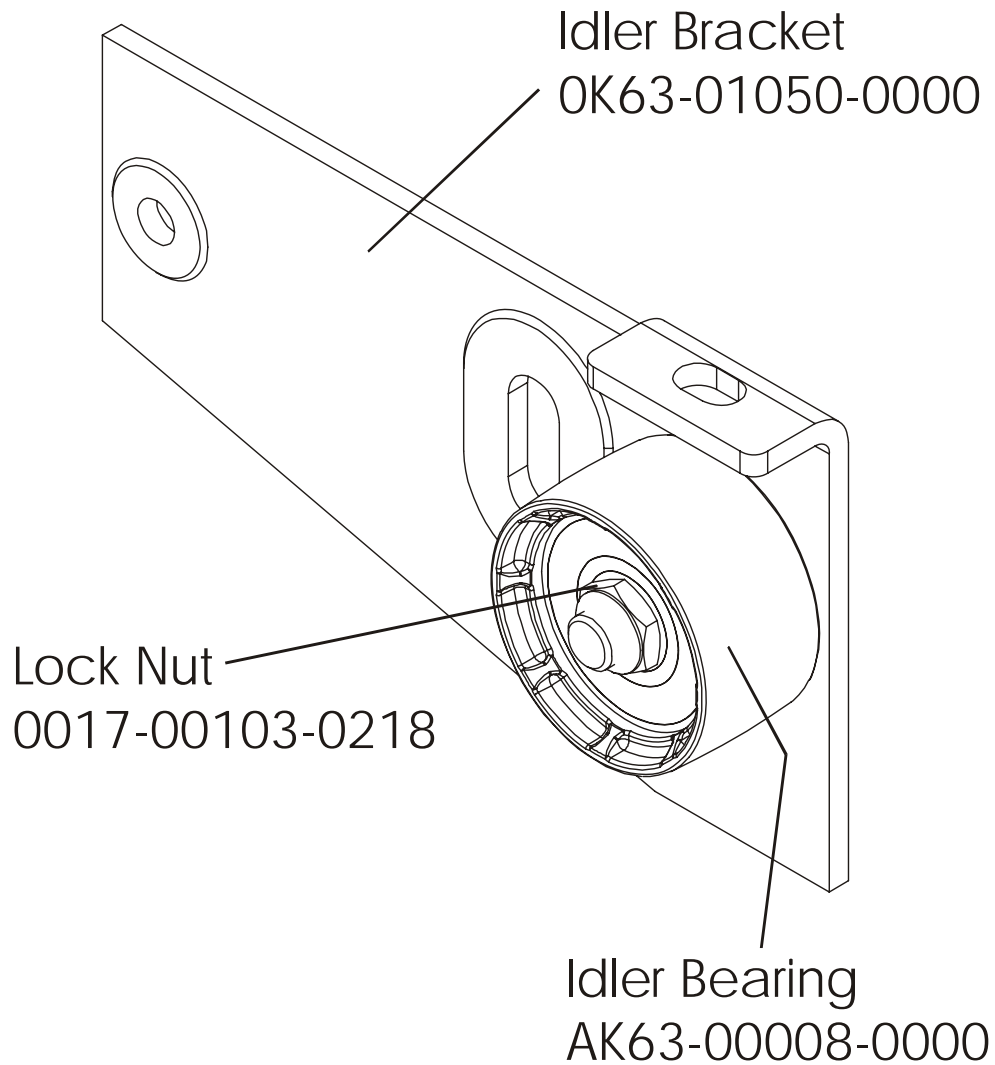


**ARCTIC SILVER 90R**  
**Seat Assembly**

 **90R-0XXX-02**  
**S/N CCJ100000 and UP**

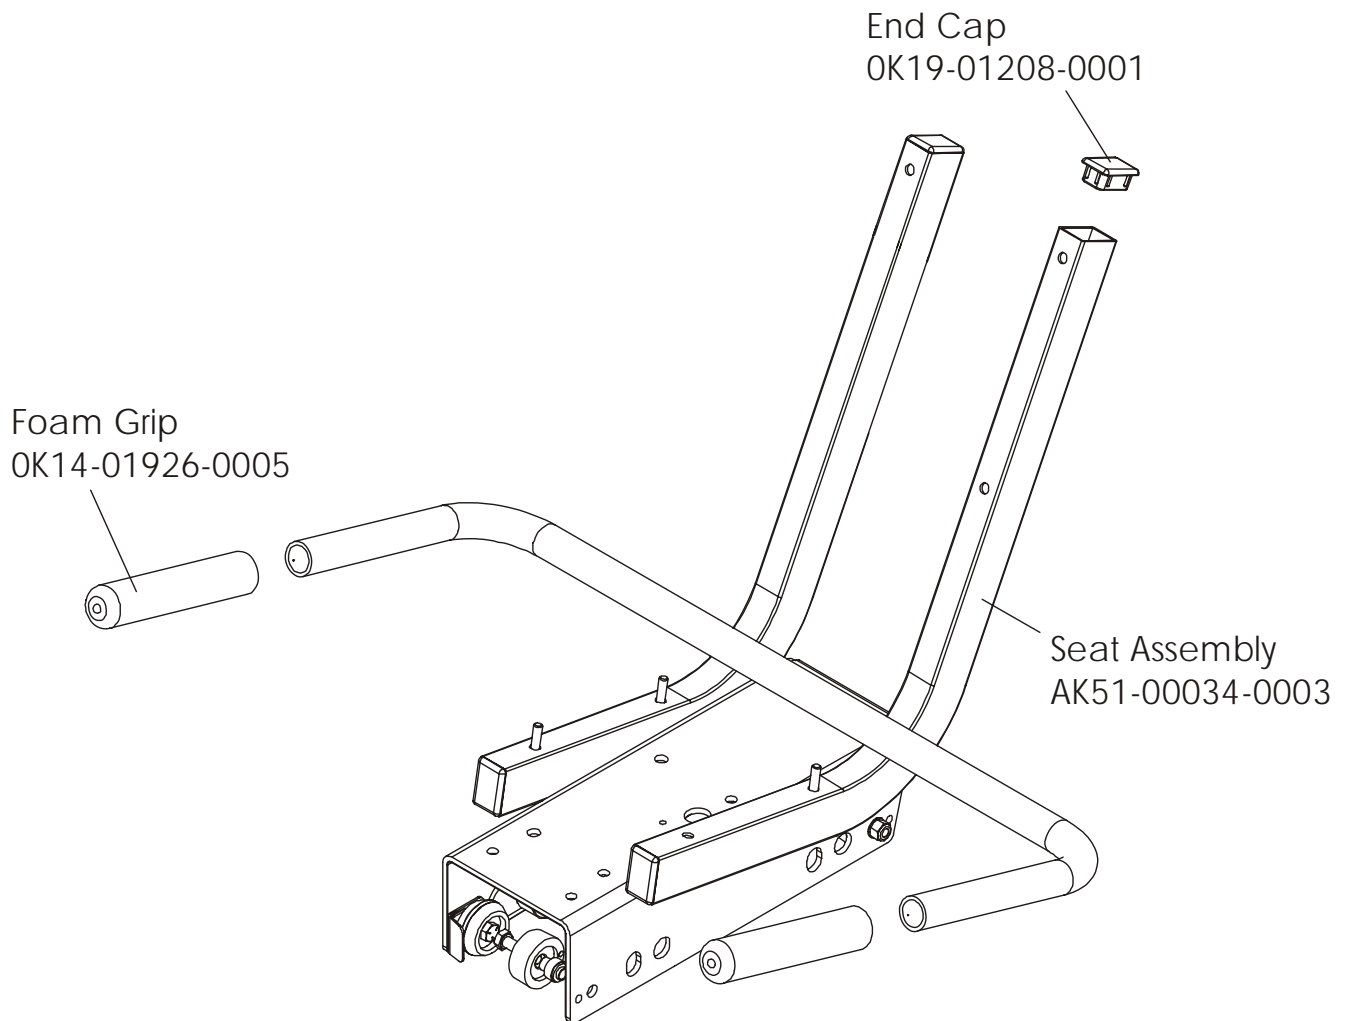


**ARCTIC SILVER 90R**  
**Seat Assembly - Bottom**

 **90R-0XXX-02**  
**S/N CCJ100000 and UP**

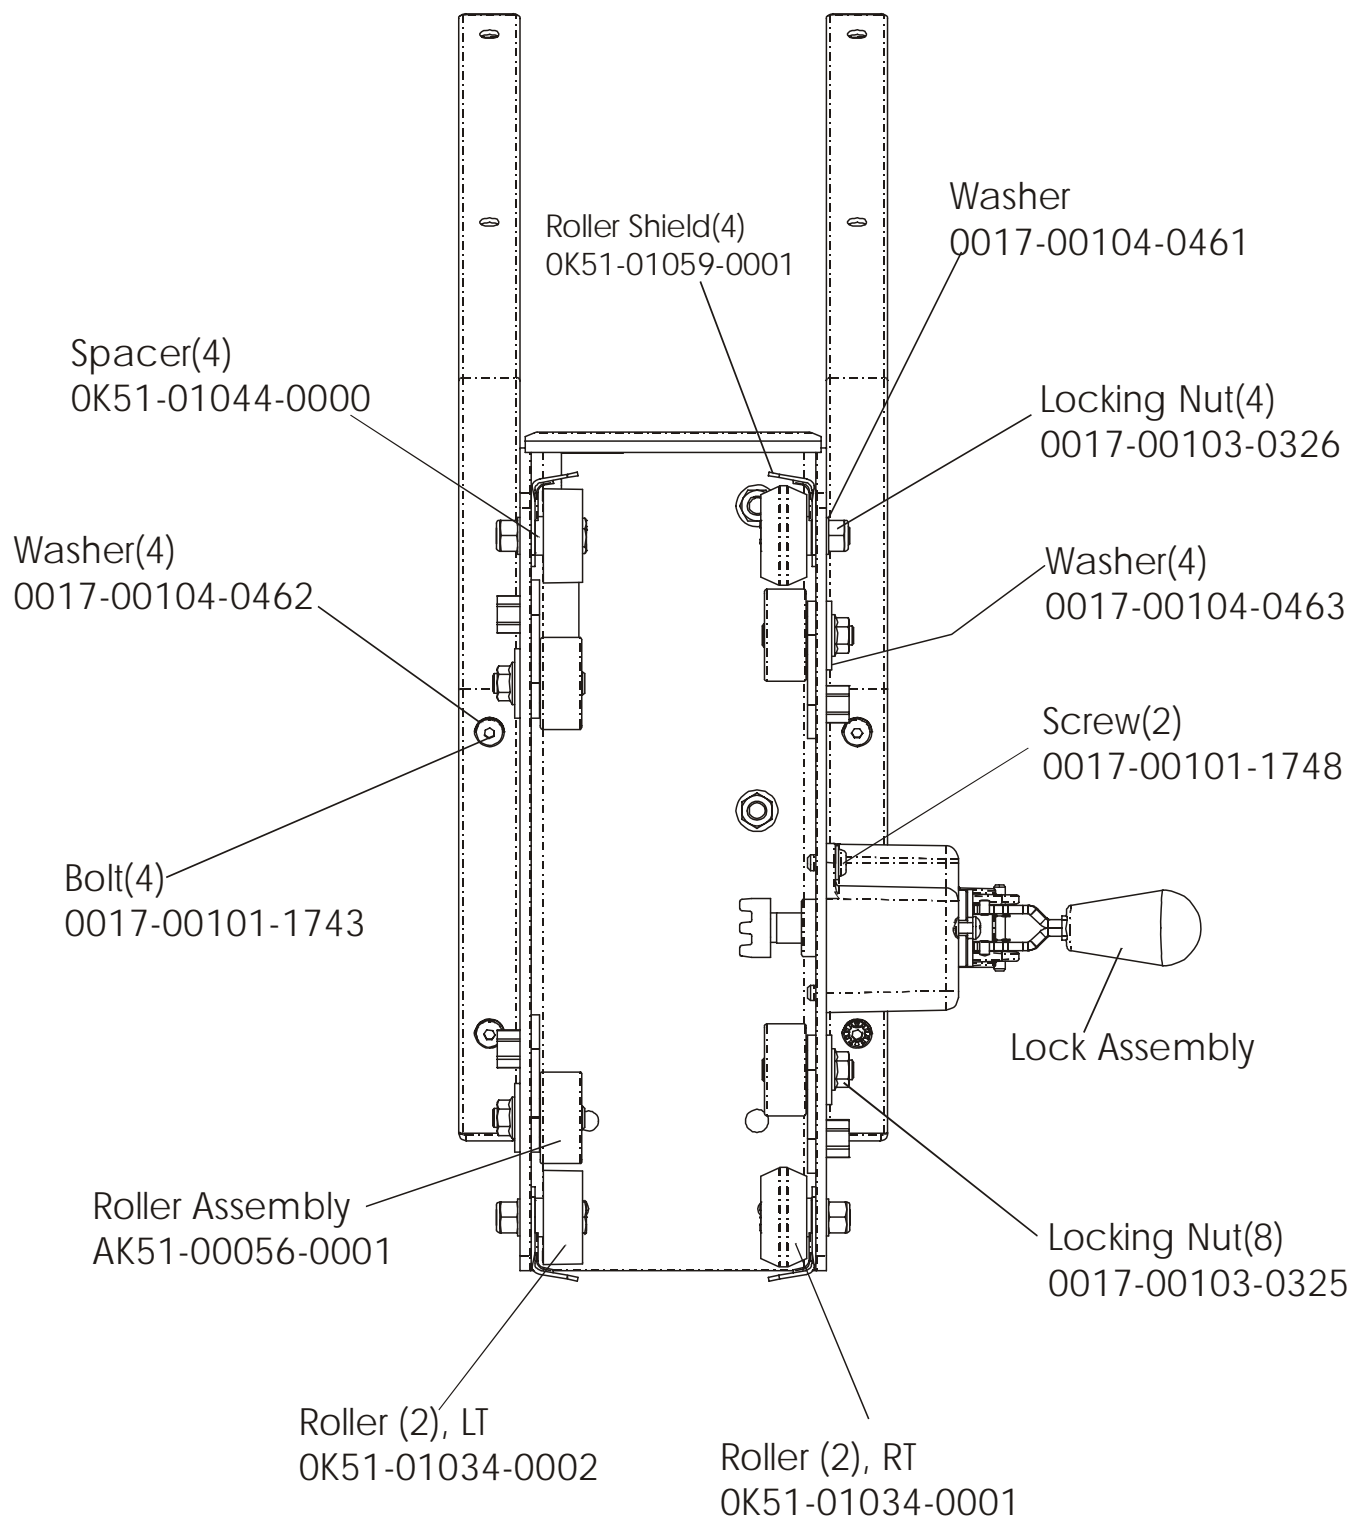

**ARCTIC SILVER 90R**  
**Seat Frame Assembly**

 **90R-0XXX-02**  
**S/N CCJ100000 and UP**

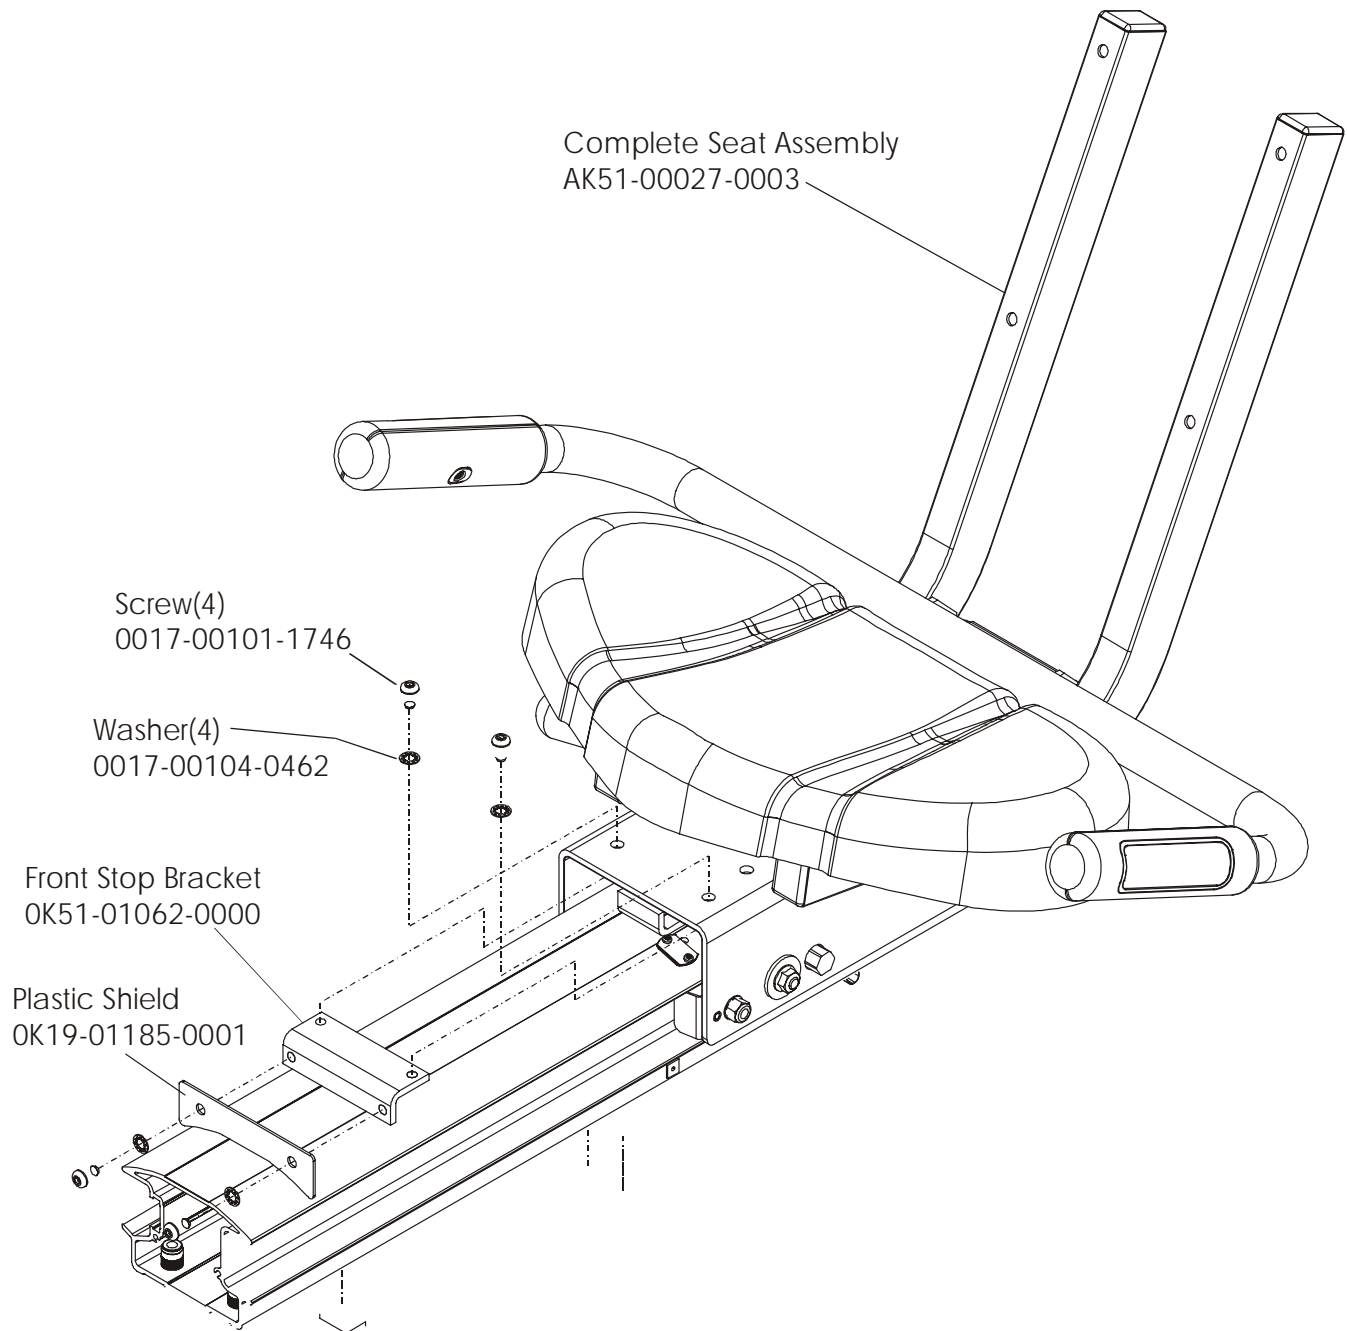


## ARCTIC SILVER 90R

### Seat Pads and Accessory Tray

90R-0XXX-02

 S/N CCJ100000 and UP

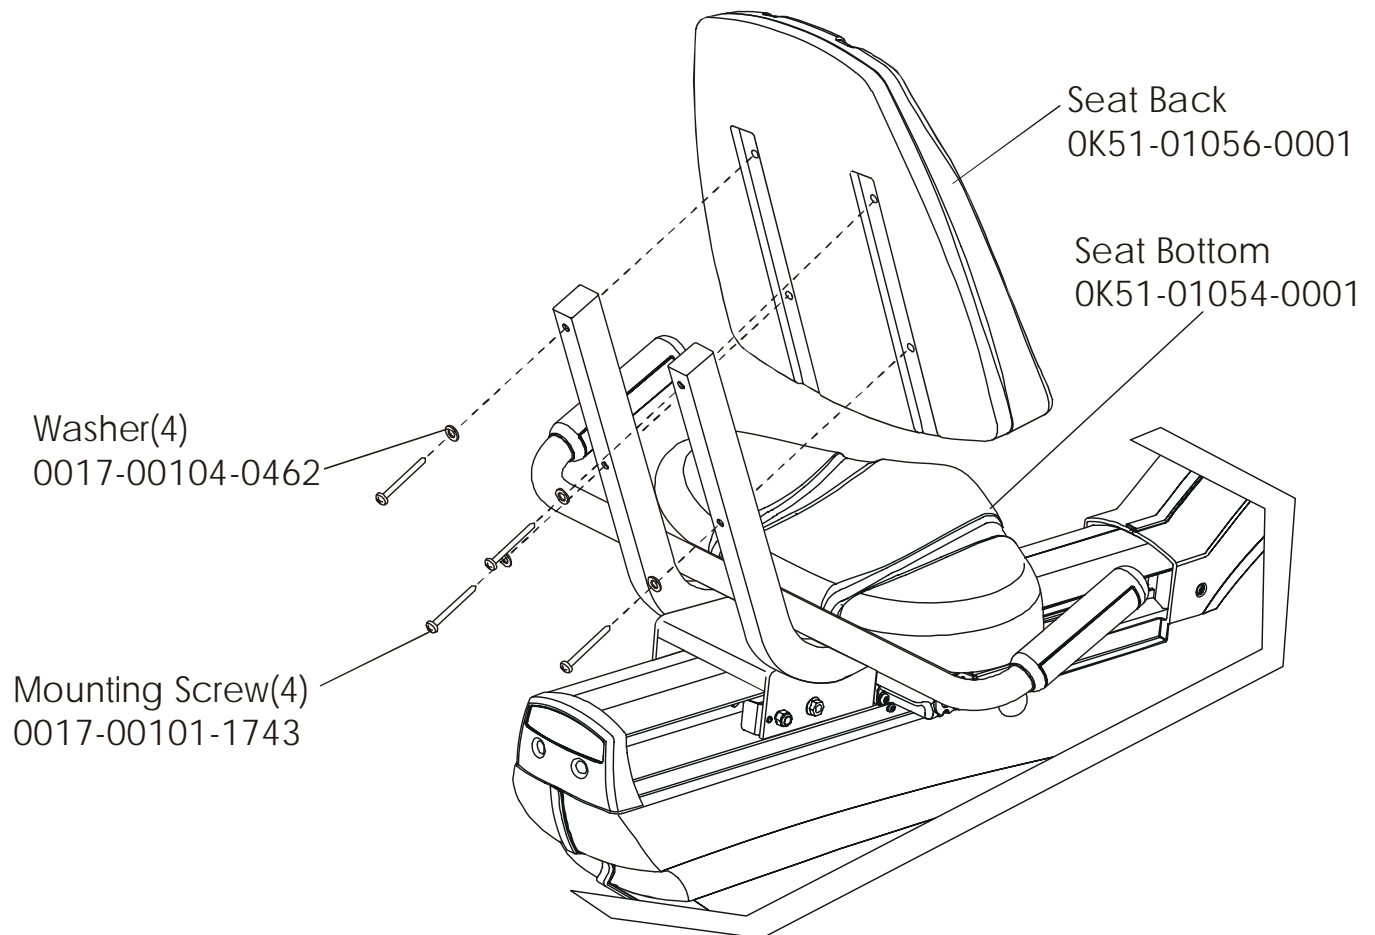




# ARCTIC SILVER 90R

Extrusion Assembly – AK39-00027-0006

90R-0XXX-02

 S/N CCJ100000 and UP

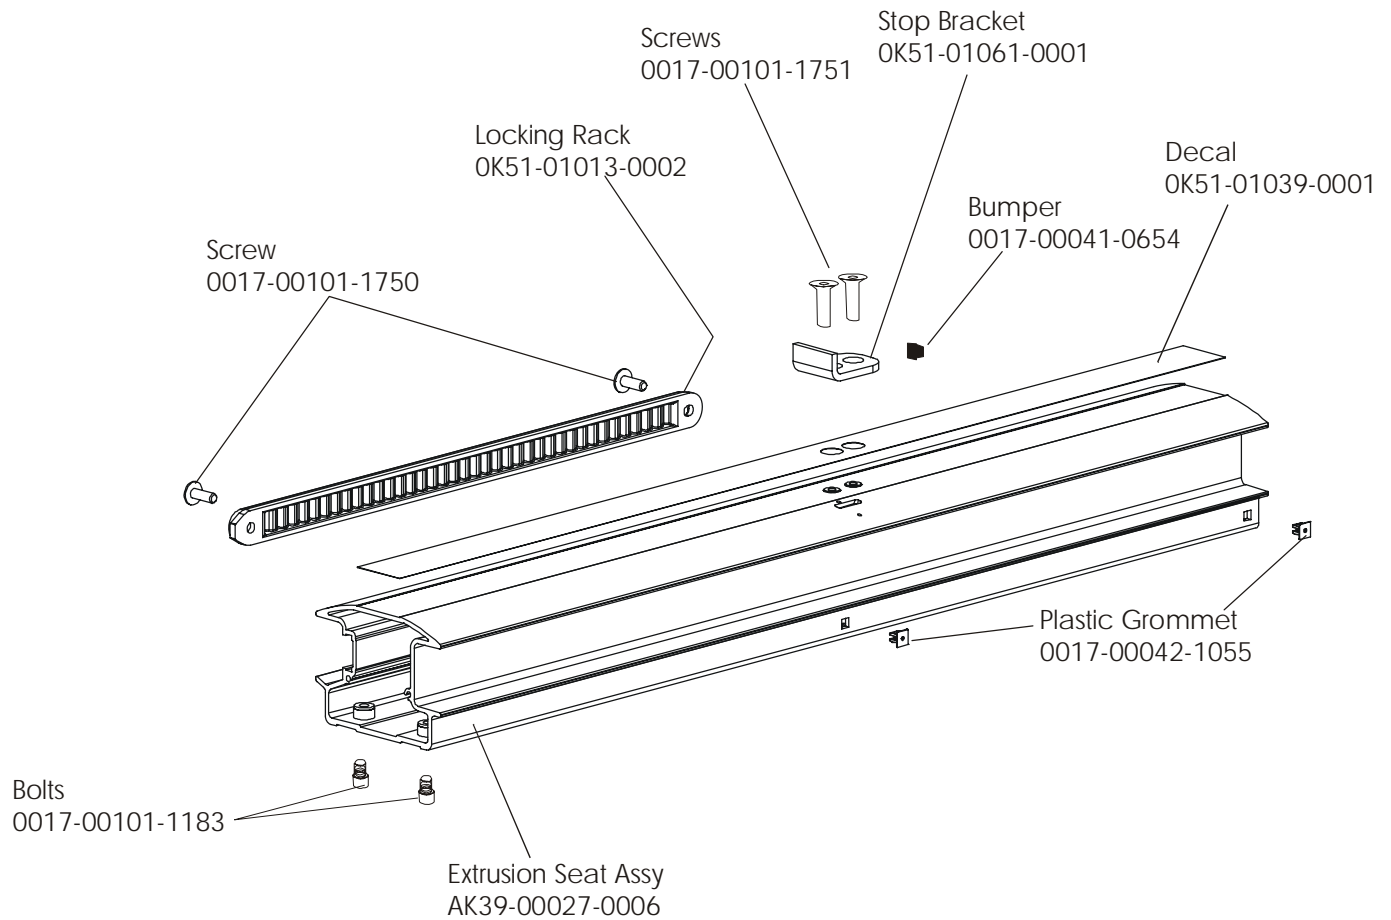


# ARCTIC SILVER 90R

Locking Assembly – AK51-00053-0001

90R-0XXX-02

 S/N CCJ100000 and UP

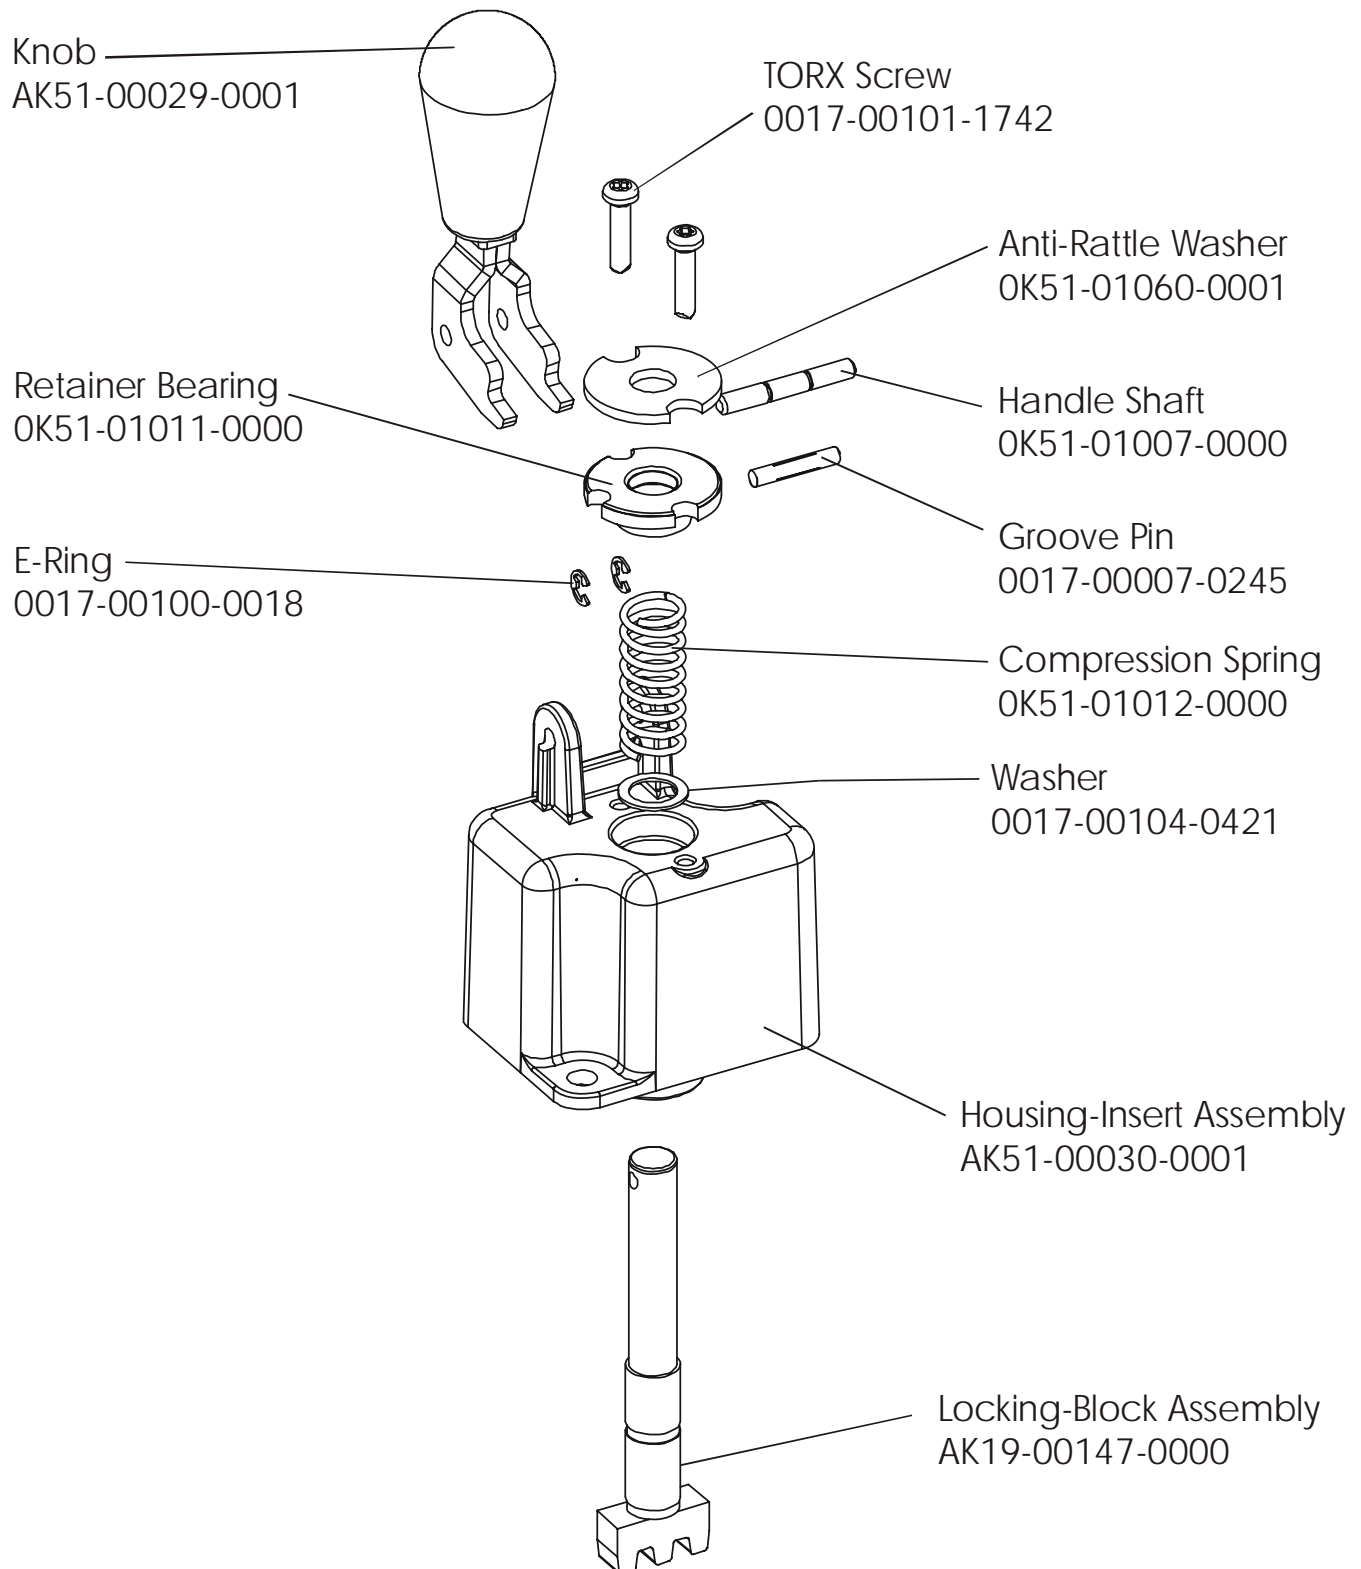


# ARCTIC SILVER 90R

## Wheel and Leveler

90R-0XXX-02

 S/N CCJ100000 and UP

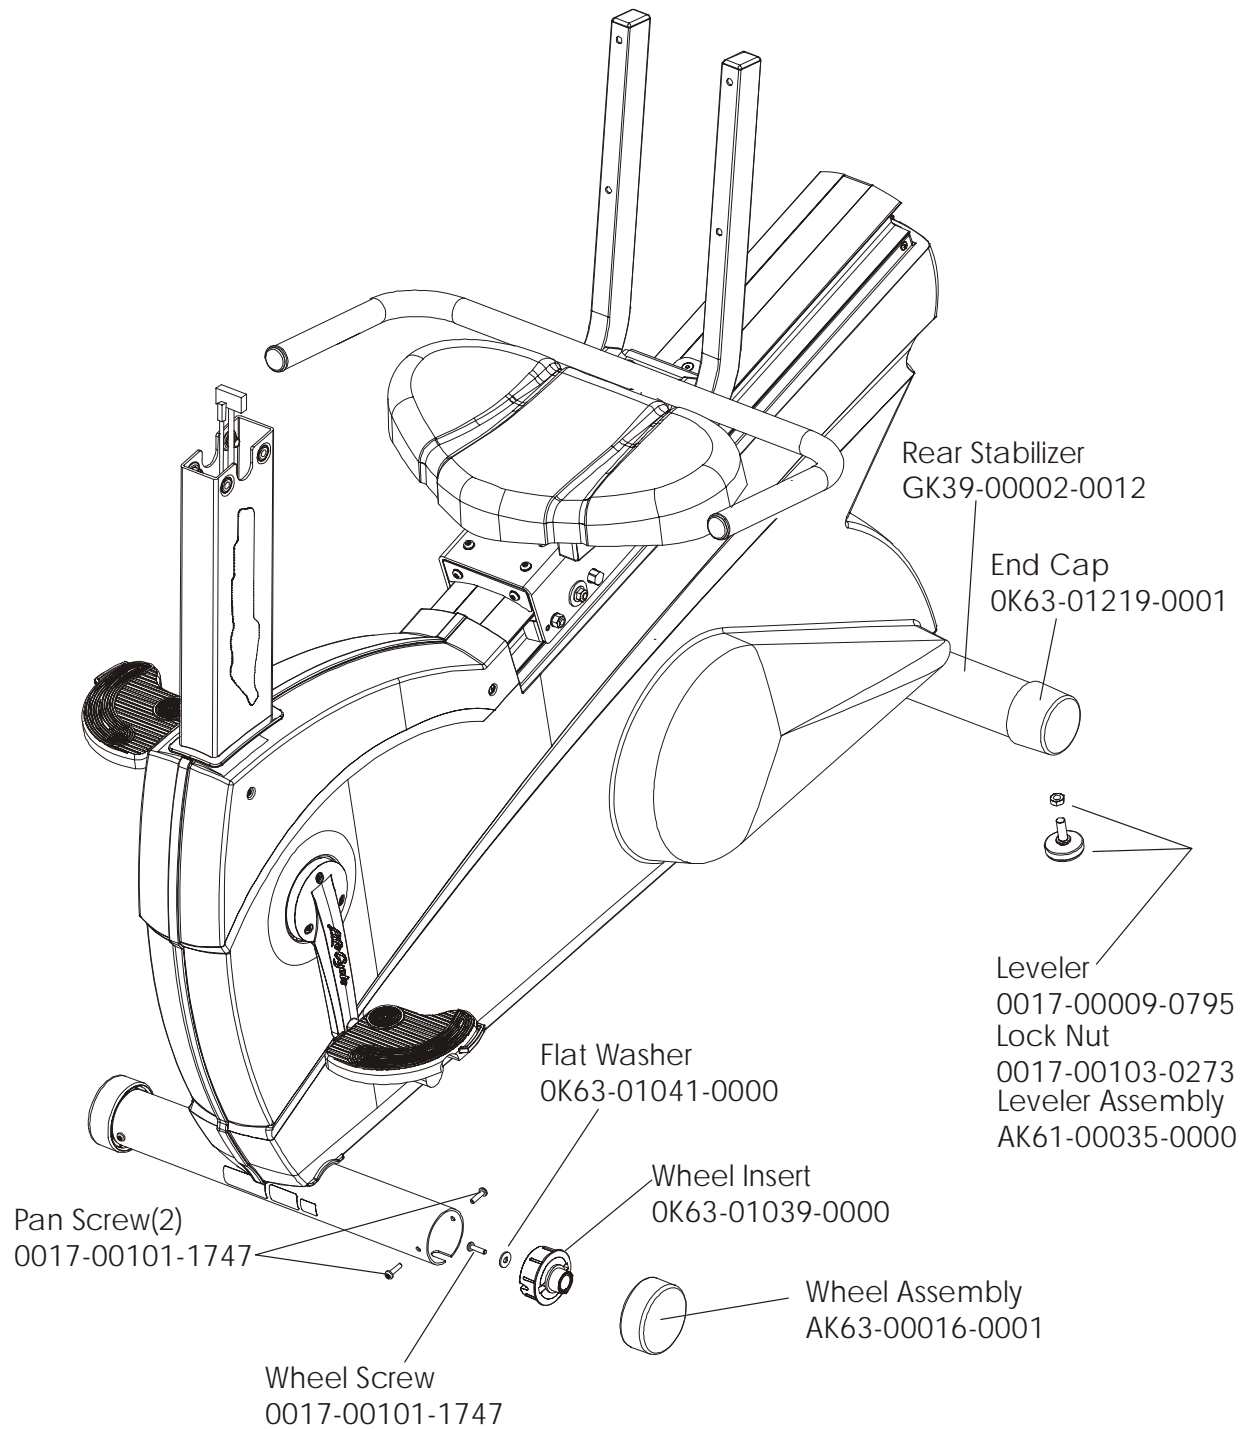



# ARCTIC SILVER 90R

## Cables

90R-0XXX-02

S/N CCJ100000 and UP

  Cable (Alternator to control)  
AK39-00009-0000

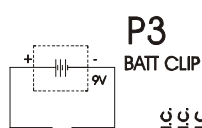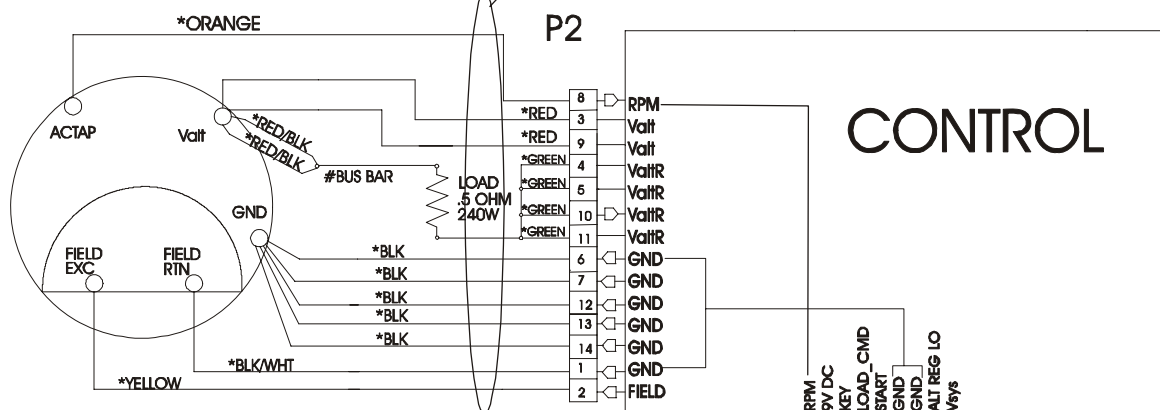

Cable Main  
AK39-00008-0000

